

## Contents

Activity 1 – Action Recognition with Two-Stream Inflated 3D ConvNet (I3D) .....	2
Activity 2 – Action Recognition with MMAction2.....	5
Activity 3 – Creating your own action recognition model .....	11

## Activity 1 – Action Recognition with Two-Stream Inflated 3D ConvNet (I3D)

In this activity, we will learn:

- ☐ How to setup and install I3D for action inference
- ☐ How to interact with UCF101 dataset to retrieve useful information
- ☐ How to retrieve labels from kinetics-400
- ☐ How to retrieve the videos from UCF101 dataset for testing purpose
- ☐ Visualise the result of the action detection on Google Colab

Reference: <https://github.com/deepmind/kinetics-i3d>

Model reference (i3d-kinetics-400): <https://tfhub.dev/deepmind/i3d-kinetics-400/1>

Action reference (i3d-kinetics-400): [https://github.com/deepmind/kinetics-i3d/blob/master/data/label\\_map.txt](https://github.com/deepmind/kinetics-i3d/blob/master/data/label_map.txt)

### 1. Installation and execution of I3D for action inference

- a) Importing the os library and preparing the name and URL of the git repository to be downloaded.

```
01 !pip install -q imageio
02 !pip install -q opencv-python
03 !pip install -q git+https://github.com/tensorflow/docs
```

- b) Import the necessary libraries.

```
01 # TensorFlow and TF-Hub modules.
02 from absl import logging
03
04 import tensorflow as tf
05 import tensorflow_hub as hub
06 from tensorflow_docs.vis import embed
07
08 logging.set_verbosity(logging.ERROR)
09
10 # Some modules to help with reading the UCF101 dataset.
11 import random
12 import re
13 import os
14 import tempfile
15 import ssl
16 import cv2
17 import numpy as np
18
19 # Some modules to display an animation using imageio.
20 import imageio
21 from IPython import display
22
23 from urllib import request # requires python3
```

- c) Functions necessary to interact with the UCF101 dataset.

```
01 # Utilities to fetch videos from UCF101 dataset
02 UCF_ROOT = "https://www.crcv.ucf.edu/THUMOS14/UCF101/UCF101/"
03 _VIDEO_LIST = None
04 _CACHE_DIR = tempfile.mkdtemp()
05 unverified_context = ssl._create_unverified_context()
06
07 # Function to list the ucf video
08 def list_ucf_videos():
09     """Lists videos available in UCF101 dataset."""
10     global _VIDEO_LIST
11     if not _VIDEO_LIST:
12         index = request.urlopen(UCF_ROOT, context=unverified_context).read().decode("utf-8")
13         videos = re.findall("(v [\\w_]+\\.avi)", index)
14         _VIDEO_LIST = sorted(set(videos))
15         return list(_VIDEO_LIST)
16
17 # Function to retrieve the ucf video
18 def fetch_ucf_video(video):
19     """Fetches a video and cache into local filesystem."""
```

```
20 cache_path = os.path.join(_CACHE_DIR, video)
21 if not os.path.exists(cache_path):
22     urlpath = request.urljoin(UCF_ROOT, video)
23     print("Fetching %s => %s" % (urlpath, cache_path))
24     data = request.urlopen(urlpath, context=unverified_context).read()
25     open(cache_path, "wb").write(data)
26     return cache_path
27
28 # Function to open video files using CV2
29 def crop_center_square(frame):
30     y, x = frame.shape[0:2]
31     min_dim = min(y, x)
32     start_x = (x // 2) - (min_dim // 2)
33     start_y = (y // 2) - (min_dim // 2)
34     return frame[start_y:start_y+min_dim, start_x:start_x+min_dim]
35
36 #Function to load video
37 def load_video(path, max_frames=0, resize=(224, 224)):
38     cap = cv2.VideoCapture(path)
39     frames = []
40     try:
41         while True:
42             ret, frame = cap.read()
43             if not ret:
44                 break
45             frame = crop_center_square(frame)
46             frame = cv2.resize(frame, resize)
47             frame = frame[:, :, [2, 1, 0]]
48             frames.append(frame)
49
50             if len(frames) == max_frames:
51                 break
52     finally:
53         cap.release()
54     return np.array(frames) / 255.0
55
56 #function to convert from video to animated gif
57 def to_gif(images):
58     converted_images = np.clip(images * 255, 0, 255).astype(np.uint8)
59     imageio.mimsave('./animation.gif', converted_images, fps=25)
60     return embed.embed_file('./animation.gif')
```

d) Retrieve the labels from kinetics-400

```
01 # Get the kinetics-400 action labels from the GitHub repository.
02 KINETICS_URL = "https://raw.githubusercontent.com/deepmind/kinetics-
03 i3d/master/data/label_map.txt"
04 with request.urlopen(KINETICS_URL) as obj:
05     labels = [line.decode("utf-8").strip() for line in obj.readlines()]
06 print("Found %d labels." % len(labels))
```

e) Retrieving the list of videos from the UCF dataset.

```
01 # Get the list of videos in the dataset.
02 ucf_videos = list_ucf_videos()
03
04 categories = {}
05 for video in ucf_videos:
06     category = video[2:-12]
07     if category not in categories:
08         categories[category] = []
09     categories[category].append(video)
10 print("Found %d videos in %d categories." % (len(ucf_videos), len(categories)))
11
12 for category, sequences in categories.items():
13     summary = ", ".join(sequences[:2])
14     print("%-20s %4d videos (%s, ...)" % (category, len(sequences), summary))
```

- f) Using one of the videos from the list of videos from the UCF dataset. You may change this video to another video of your preference.

```
01 # Get a sample cricket video.
02 video_path = fetch_ucf_video("v_CricketShot_g04_c02.avi")
03 sample_video = load_video(video_path)
```

- g) Show the dimension of the loaded video.

```
01 sample_video.shape
```

- h) Load the I3D model.

```
01 i3d = hub.load("https://tfhub.dev/deepmind/i3d-kinetics-400/1").signatures['default']
```

- i) Create and call the function that uses the I3D to perform the action prediction and display the top 5 predicted categories.

```
01 def predict(sample_video):
02     # Add a batch axis to the to the sample video.
03     model_input = tf.constant(sample_video, dtype=tf.float32)[tf.newaxis, ...]
04
05     logits = i3d(model_input)['default'][0]
06     probabilities = tf.nn.softmax(logits)
07
08     print("Top 5 actions:")
09     for i in np.argsort(probabilities)[::-1][:5]:
10         print(f" {labels[i]:22}: {probabilities[i] * 100:5.2f}%")
11
12 predict(sample_video)
```

- j) Retrieve another video from the internet for testing. You may also choose an alternate video from the following: [https://commons.wikimedia.org/wiki/Category:Videos\\_of\\_sports](https://commons.wikimedia.org/wiki/Category:Videos_of_sports)

```
01 !curl -O https://upload.wikimedia.org/wikipedia/commons/8/86/End_of_a_jam.ogv
02
03 video_path = "End_of_a_jam.ogv"
04
05 sample_video = load_video(video_path)[:100]
06 sample_video.shape
```

- k) Converting the video to an animated GIF for viewing through colab.

```
01 to_gif(sample_video)
```

- l) Performing prediction on the latest video.

```
01 predict(sample_video)
```

#### Activity wrap-up:

##### We learn

- ☐ How to setup and install ID3 for action inference
- ☐ How to interact with UCF101 dataset to retrieve useful information
- ☐ How to retrieve labels from kinetics-400
- ☐ How to retrieve the videos from UCF101 dataset for testing purpose
- ☐ Visualise the result of the action detection on Google Colab

## Activity 2 – Action Recognition with MMAction2

In this activity, we will learn:

- ☐ How to mounting Google Drive to Google Colab
- ☐ How to install and configure MMAction 2 for action inference
- ☐ How to train a new action recognition model
- ☐ How to validate the accuracy of the newly created model

Reference: <https://github.com/open-mmlab/mmaction2>

### 1. Mounting of Google Drive as a storage for Google Colab.

- a) Import the Google Colab's drive library and mounting it to your Google Drive.

```
01 # Load the Drive helper and mount
02 from google.colab import drive
03
04 # This will prompt for authorization.
05 drive.mount('/content/drive')
06
07 # Change director listing to your google drive.
08 % cd /content/drive/My Drive
```

- b) Click on the URL link when it appears below the cell.


Go to this URL in a browser: <https://accounts.google.com/>

- c) Click on the desired Google Account.



Choose an account

to continue to Google Drive



- d) Scroll down and click on the “Allow” button.

Allow

- e) Click on the “Copy” icon to copy the code.

Please copy this code, switch to your application and paste it there:

4/1AY0e-




- f) Go back to your Google Colab tab and paste the code into the “authorization code” field and press enter.

Enter your authorization code:

4/1AY0e-g7aTI6qnxbsQS9kF

- g) You will see “Mounted at /content/drive” where /content/drive is the mount point on Google Colab.

- h) By clicking on the "Folder" icon, you will be able to view the current files create in the temporary space in Google Colab. By expanding on the folder "drive", you will be able to view the content of your Google Drive and access any folders that you wish to use or to save contents directly into Google Drive.

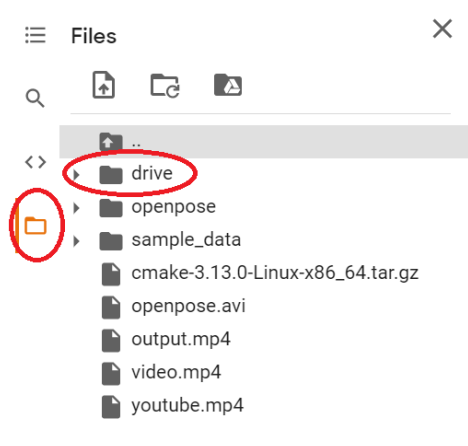

- i) Clone the workspace from github.

```
01 # Execute this only once so that the repository is cloned into your "Workspace" folder.
02 ! git clone https://github.com/zacktohsh/Workspace_Action
03
04 # Change director listing to your google drive.
05 % cd /content/drive/My Drive/Workspace_Action
06
07 # https://drive.google.com/file/d/1YMjP8CaxGC73sxB6tkLOqNG1TUtp8kIk/view?usp=sharing
08 !gdown --id 1YMjP8CaxGC73sxB6tkLOqNG1TUtp8kIk
09
10 !unzip -a Workspace_Action.zip
11 !rm Workspace_Action.zip
12 # Verify correct path and content downloaded
13 ! pwd
14 ! ls -l
```

- j) Checking the current version of libraries.

```
01 # Check nvcc version
02 !nvcc -V
03 # Check GCC version
04 !gcc --version
05
06 # Check python version
07 !python --version
```

- k) Installing the necessary libraries.

```
01 #Installation of required libraries and files.
02 !pip install torch-1.5.1+cu101-cp37-cp37m-linux_x86_64.whl
03 !pip install torchvision-0.6.1+cu101-cp37-cp37m-linux_x86_64.whl
04 !pip install mmdcv_full-latest+torch1.5.0+cu101-cp37-cp37m-manylinux1_x86_64.whl
05
06 %cd mmaction2
07 !pip install -e .
08
09 # Install some optional requirements
10 !pip install -r requirements/optional.txt
```

Ignore the following error:

ERROR: torchvision 0.8.1+cu101 has requirement torch==1.7.0, but you'll have torch 1.5.1+cu101 which is incompatible.

- l) Click on the "RESTART RUNTIME" button that may appear at the end of the cell for part "1k".

**WARNING: The following packages were previously imported in this runtime:**  
**[numpy]**  
**You must restart the runtime in order to use newly installed versions.**

RESTART RUNTIME

- m) Change directory

```
01 # Run this after a runtime restart.
02 % cd /content/drive/My Drive/Workspace_Action/mmaction2
03 ! pwd
04 ! ls -l
```

- n) Import required libraries.

```
01 # Check Pytorch installation
02 import torch, torchvision
03 print(torch.__version__, torch.cuda.is_available())
04
05 # Check MMAction2 installation
06 import mmaction
07 print(mmaction.__version__)
08
09 # Check MMCV installation
10 from mmcv.ops import get_compiling_cuda_version, get_compiler_version
11 print(get_compiling_cuda_version())
12 print(get_compiler_version())
13
14 from mmaction.apis import inference_recognizer, init_recognizer
```

- o) Define the location of both the configuration file along with the checkpoint file to be used.

```
01 # Choose to use a config and initialize the recognizer
02 config = 'configs/recognition/tsn/tsn_r50_video_inference_1x1x3_100e_kinetics400_rgb.py'
03 # Setup a checkpoint file to load
04 checkpoint = 'checkpoints/tsn_r50_1x1x3_100e_kinetics400_rgb_20200614-e508be42.pth'
05 # Initialize the recognizer
06 model = init_recognizer(config, checkpoint, device='cuda:0')
```

- p) Setting the video file and label to use followed by initiating the recognizer function.

```
01 # Use the recognizer to do inference
02 video = 'demo/demo.mp4'
03 label = 'demo/label_map.txt'
04 results = inference_recognizer(model, video, label)
```

- q) Show the results from the recognizer function.

```
01 # Let's show the results
02 for result in results:
03     print(f'{result[0]}: ', result[1])
```

## 2. Training an Action Recognition Model

- a) Install and view the tree structure of kinetics400\_tiny, its folder directory and the file content in it.

```
01 # Install tree first
02 !apt-get -q install tree
03 !tree kinetics400_tiny
```

- b) Displaying the content of the video dataset, displaying the path, file name together with the label.

```
01 # After downloading the data, we need to check the annotation format
02 !cat kinetics400_tiny/kinetics_tiny_train_video.txt
```

c) Load the configuration file.

```
01 from mmcv import Config
02 cfg = Config.fromfile('./configs/recognition/tsn/tsn_r50_video_1x1x8_100e_kinetics400_rgb.py')
```

d) Modifying the configuration so that it is compatible with the Kinetics400-tiny dataset.

```
01 from mmcv.runner import set_random_seed
02
03 # Modify dataset type and path
04 cfg.dataset_type = 'VideoDataset'
05 cfg.data_root = 'kinetics400_tiny/train/'
06 cfg.data_root_val = 'kinetics400_tiny/val/'
07 cfg.ann_file_train = 'kinetics400_tiny/kinetics_tiny_train_video.txt'
08 cfg.ann_file_val = 'kinetics400_tiny/kinetics_tiny_val_video.txt'
09 cfg.ann_file_test = 'kinetics400_tiny/kinetics_tiny_val_video.txt'
10
11 cfg.data.test.type = 'VideoDataset'
12 cfg.data.test.ann_file = 'kinetics400_tiny/kinetics_tiny_val_video.txt'
13 cfg.data.test.data_prefix = 'kinetics400_tiny/val/'
14
15 cfg.data.train.type = 'VideoDataset'
16 cfg.data.train.ann_file = 'kinetics400_tiny/kinetics_tiny_train_video.txt'
17 cfg.data.train.data_prefix = 'kinetics400_tiny/train/'
18
19 cfg.data.val.type = 'VideoDataset'
20 cfg.data.val.ann_file = 'kinetics400_tiny/kinetics_tiny_val_video.txt'
21 cfg.data.val.data_prefix = 'kinetics400_tiny/val/'
22
23 # The flag is used to determine whether it is omnisource training
01 cfg.setdefault('omnisource', False)
02 # Modify num classes of the model in cls_head
03 cfg.model.cls_head.num_classes = 2
04 # We can use the pre-trained TSN model
05 cfg.load_from = './checkpoints/tsn_r50_1x1x3_100e_kinetics400_rgb_20200614-e508be42.pth'
06
07 # Set up working dir to save files and logs.
08 cfg.work_dir = './tutorial_exps'
09
10 # The original learning rate (LR) is set for 8-GPU training.
11 # We divide it by 8 since we only use one GPU.
12 cfg.data.videos_per_gpu = cfg.data.videos_per_gpu // 16
13 cfg.optimizer.lr = cfg.optimizer.lr / 8 / 16
14 cfg.total_epochs = 30
15
16 # We can set the checkpoint saving interval to reduce the storage cost
17 cfg.checkpoint_config.interval = 10
18 # We can set the log print interval to reduce the the times of printing log
19 cfg.log_config.interval = 5
20
21 # Set seed thus the results are more reproducible
22 cfg.seed = 0
23 set_random_seed(0, deterministic=False)
24 cfg.gpu_ids = range(1)
25
26
27 # We can initialize the logger for training and have a look
28 # at the final config used for training
29 print(f'Config:\n{cfg.pretty_text}')
```

e) Initialize both the dataset and the recognizer, followed by training the recognition model.

```
01 import os.path as osp
02
03 from mmaction.datasets import build_dataset
04 from mmaction.models import build_model
```



```
05 from mmaction.apis import train_model
06
07 import mmcv
08
09 # Build the dataset
10 datasets = [build_dataset(cfg.data.train)]
11
12 # Build the recognizer
13 model = build_model(cfg.model, train_cfg=cfg.train_cfg, test_cfg=cfg.test_cfg)
14
15 # Create work_dir
16 mmcv.mkdir_or_exist(osp.abspath(cfg.work_dir))
17 train_model(model, datasets, cfg, distributed=False, validate=True)
```

- f) Validation of the newly trained action recognition model's prediction accuracy.

```
01 from mmaction.apis import single_gpu_test
02 from mmaction.datasets import build_dataloader
03 from mmcv.parallel import MMDDataParallel
04
05 # Build a test dataloader
06 dataset = build_dataset(cfg.data.test, dict(test_mode=True))
07 data_loader = build_dataloader(
08     dataset,
09     videos_per_gpu=1,
10     workers_per_gpu=cfg.data.workers_per_gpu,
11     dist=False,
12     shuffle=False)
13 model = MMDDataParallel(model, device_ids=[0])
14 outputs = single_gpu_test(model, data_loader)
15
16 eval_config = cfg.evaluation
17 eval_config.pop('interval')
18 eval_res = dataset.evaluate(outputs, **eval_config)
19 for name, val in eval_res.items():
20     print(f'{name}: {val:.04f}')
```

- g) Setup the new model to be tested with a new video.

```
01 from mmaction.apis import inference_recognizer, init_recognizer
02
03 # Choose to use a config and initialize the recognizer
04 config = 'configs/recognition/tsn/tsn_r50_video_inference_1x1x3_100e_kinetics400_rgb.py'
05 # Setup a checkpoint file to load
06 checkpoint = 'tutorial_exps/epoch_30.pth'
07 # Initialize the recognizer
08 model = init_recognizer(cfg, checkpoint, device='cuda:0')
```

- h) Copy both the label map file and the test video into the working director for testing purpose. You may also use other video files that are present in the validation (val) folder.  
(Note: Google Drive may take a while to reflect the presence of the file so refer to the folder structure from Google Colab.)

```
01 from shutil import copyfile
02 copyfile('./kinetics400_tiny/val/0pVGiAU6XEA.mp4', './tutorial_exps/0pVGiAU6XEA.mp4')
03 copyfile('./demo/label_map.txt', './tutorial_exps/label_map.txt')
```

- i) Setting the video file and label to use followed by initiating the recognizer function.

```
01 # Use the recognizer to do inference
02 video = 'tutorial_exps/0pVGiAU6XEA.mp4'
03 label = 'tutorial_exps/label_map.txt'
04 results = inference_recognizer(model, video, label)
```

j) Show the result of the prediction.

```
01 # Let's show the results
02 for result in results:
03     print(f'{result[0]}: ', result[1])
```

Activity wrap-up:

We learn

- ☐ How to mounting Google Drive to Google Colab
- ☐ How to install and configure MMAAction 2 for action inference
- ☐ How to train a new action recognition model
- ☐ How to validate the accuracy of the newly created model


## Activity 3 – Creating your own action recognition model

In this activity, we will learn:

- How to use MMAction2 to create a new action recognition model


### 1. Modifying the current files in PoseNet library in an attempt to produce an action recognition system

- In this activity, you are required to train your own action recognition model.
- You are to find a partner and choose between two to three action of interest.
- Perform a video recording of the actions of choice using your mobile phone and upload the into the “tutorial\_exps/video” folder. (the more videos you use for your training, the more accurate your model will be, but do be mindful of the storage limit on your Google Drive.
- Create a file “label\_map.txt” and key in the actions.

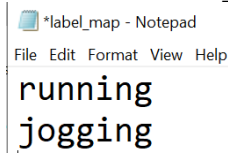

```
*label_map - Notepad
File Edit Format View Help
running
jogging
```

- Create three files (train\_video, test\_video, val\_video).
- Inside each file, include the files that you wish to include for each phase of the training process followed by the respective label (0,1,2).

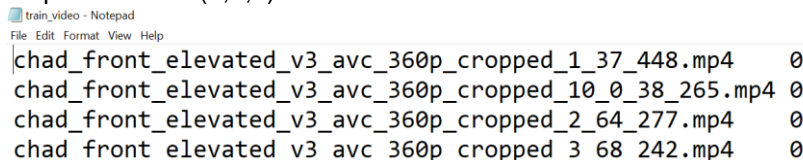

```
train_video - Notepad
File Edit Format View Help
chad_front_elevated_v3_avc_360p_cropped_1_37_448.mp4 0
chad_front_elevated_v3_avc_360p_cropped_10_0_38_265.mp4 0
chad_front_elevated_v3_avc_360p_cropped_2_64_277.mp4 0
chad_front_elevated_v3_avc_360p_cropped_3_68_242.mp4 0
```

- Update the codes used in Activity 2, 2d as follow:

```
3 # Modify dataset type and path
4 cfg.dataset_type = 'VideoDataset'
5 cfg.data_root = 'tutorial_exps/videos/'
6 cfg.data_root_val = 'tutorial_exps/videos/'
7 cfg.ann_file_train = 'tutorial_exps/train_video.txt'
8 cfg.ann_file_val = 'tutorial_exps/val_video.txt'
9 cfg.ann_file_test = 'tutorial_exps/test_video.txt'
10
11 cfg.data.test.type = 'VideoDataset'
12 cfg.data.test.ann_file = 'tutorial_exps/test_video.txt'
13 cfg.data.test.data_prefix = 'tutorial_exps/videos/'
14
15 cfg.data.train.type = 'VideoDataset'
16 cfg.data.train.ann_file = 'tutorial_exps/train_video.txt'
17 cfg.data.train.data_prefix = 'tutorial_exps/videos/'
18
19 cfg.data.val.type = 'VideoDataset'
20 cfg.data.val.ann_file = 'tutorial_exps/val_video.txt'
21 cfg.data.val.data_prefix = 'tutorial_exps/videos/'
```

- Do not modify the number of class to the correct integer representation.  
`cfg.model.cls_head.num_classes = 2`
- Feel free to play around with the rest of the parameters such as:  
`cfg.total_epochs = 30`  
`cfg.checkpoint_config.interval = 10`  
`cfg.log_config.interval = 5`
- After you are satisfied with the configurations, rerun the configurations of Activity 2, steps 2d – 2j in sequence.

- k) If you find that the validation results in Activity 2 step 2f does not produce a high accuracy for your new model, you may modify the code in Activity 2, 2d to continue the training from where you had left off by changing the configuration to load from your last recorded epoch.  
`cfg.load_from = epoch_XX.pth`
- l) After you are satisfied with the configurations, be sure to rerun the configurations of Activity 2, steps 2d – 2j in sequence.

Activity wrap-up:

We learn how to

- ☐ How to use MMAAction2 to create a new action recognition model